

Größentabelle / Sizing Chart Keyboards & Recording

CASIO		Kronos 88 Tasten	29145	GT Pro	28049	P 100/250/300	29147
CTK 120/230	25097	Krome 61 Tasten	28101	GW 8	28106	P 155/255	29138
CTK 620L/691	29098-28098	Krome 73 Tasten	29127	JP 80	29127	P 120/120S	29138
CTK 700/3000	25097	Krome 88 Tasten	29145	Juno-Di	28101	P 140/140S	29138
CTK 800/900	29098-28098	M1	28106	Juno-G	28106	PF 2000	29148
CTK 6200/6250/7200	25097	M50-88 T	29142	Juno STAGE	29130	PSR A-300/A-350	25097
LK 30/50	28107	M50-73/61 T	28106	Prelude	28106	PSR A-1000	29098-28098
LK 35	25097	M3 61	28106	RD 300 GX/300 NX	29145	PSR A-2000	29098-28098
LK 40/43	25097	M3 73	29130	RD 300 SX	29142	PSR E213/313/223	25097
LK 86	25097	M3 88	29147	RD 600	29142	PSR E233/323/333	25097
LK 93 TV	29098-28098	Oasys 88 Tasten	29148	RD 700 GX/NX	29145	PSR E353/E363	25097
PX 100/110/160	25133-29138	PA1X	29114	RD 700 SX	29142	PSR E403/413	25097
PX 300/310/360	25133-29138	PA1Xpro	29136	RD 800/2000	29142	PSR E433/443/453	25097
PX 500/510	29138	PA2Xpro	29130	RK 100/500	29113	PSR 172/180/185	25097
WK1600-3800	29131	PA3X/4X 61 T.	25097	SH-201	25097	PSR 175	29098-28098
Privia 110/120	29138	PA3X/4X 76 T.	29130	VP 770	25097	PSR 290-295	25097
CLAVIA		PA 500	28107	VR-770	29127	PSR 350/450/760	29098-28098
Nord Compact	29113	PA 700/600/300	28106	V-Synth	29114	PSR 550/1000	29098-28098
Nord Stage 76	29113	PA 800	29113	V - Piano	29148	PSR 1100	29098-28098
Nord Stage 88/3-88	29130	PA 900/1000	28106	SOLTON		PSR 1500/2100	29098-28098
Nord elect. 3/61T	25097	R3	25065	PK 160/360	29098-28098	PSR 3000	29098-28098
Nord elect. 3/73T	29113	SP 200 RS	29138	PK 760	29131	PSR R200	25097
Nordstage EX comp.	29113	SP 250	29136	TECHNICS		PSR S500/650	25097
Nord electro 2/61T	25097	SP 280	29136	SX-P30/P50	29138	PSR S700/900/670	29098-28098
Nord electro 2/73T	29113	SV 188	29138	WALDORF		PSR S710/910/770	29098-28098
Nord C2/C2D	29098-28098	TR 61	28106	Q und Q+ Serie	28106	PSR S750/950/970	29098-28098
Nord Lead/Wave61T	28101	TR 76	29130	YAMAHA		PSS 31	25083
DYNACORD		TR 88	29142	AN1X	28107	S 80/90	29136
MP 7	28049	KURZWEIL		CP1/5	29140	S 90 ES	29145
Powermate 600	28049	K 2600	29131	CP-4	29138	S 70 XS	29136
EMU		PC 88/88 MX	29142	CP-33	29138	S 90 XS	29145-29147
xboard 25	25048	RG 100/200	29131	CP-40	29138	SY 22/35/50	28101
xboard 49	25083	SP 88/88 X	29138	CP 300	29147	SY 55	25097
xboard 61	29098-28098	M-AUDIO		DD 35	25048	SY 77	28107
GEM		Keystation Pro88	29142	DD 55	28056	SY 85	28106
GK 360	25097	O2	25048	01X	28049	Tyros 2/3/4/5-61T	29114
GK 380	28106	Oxygen 8	25048	DGX 500	29147	Tyros 5 - 76 T	29136
Promega 2	29131	Oxygen 61	25100	DGX 505	29148	YPP 15/35	29098-28098
Promega 3	29147	Novation 49	25083	DGX 520	29136	YPT 240	25097
PRP 800	29130	61 ES	28101	DGX 630/640/650/660	29147		
KAWAI		OBERHEIM		EZ-200/220	25097		
CA-X	29147	MC 200/EX	29130	Genos	29124		
EP2	29138	MC 3000	29131	KX 61	25097		
ES 1/3/4/5/6/7/8	29138	ROLAND		KX 88	29145		
ES 100/110	25133	AX 09	25083	MO 6	28106		
MP 4/5/6/7	29138	AX Synth	25125	MO 8	29136		
MP 8/8 II	29147	BK 3/BK 5	28106	MOXF 6	28106		
MP 10	29140	E 09/09W	28106	MM 8	29136		
MP 9500/11	29147	E 50/EA 7	28106	Motif6/ES6/Montage6	28107		
KETRON		E 60	29131	Motif7/ES7/Montage7	29127		
Audya 5	28098-29098	EP 880	29131	Motif8/ES8/Montage8	29148		
GP 50 classic	29131	Fantom G6	29114	Motif XF 6	28106		
SD 5	29114	Fantom G7	29131	Motif XF 7	29127		
SD 7/SD 9	29113	Fantom G8	29148	Motif XS 6	28107		
KORG		F-20	29130	Motif XS 7	29127		
AX 1500 G	25048	FC 300	25060	Motif XS 8	29148		
CX 3	28107	FP 4/4F	29138	MX 49 61 Tasten	28101		
D 3200	28056	FP 7/7F	29138	NP 11/12	25104		
EC 120/150	29147	FP-30	25133-29130	NP 30/31/32	25125		
Havian 30	29131	FP-50	25133-29138	NP-V60/V80	25127		
King Korg	28101	FP-60	29130	P 35/105/115/45	25133		
Kronos 61 Tasten	28106	FP 80/90	29142	P 60/60S/70	29138		
Kronos 73 Tasten	29127	GT10	28056	P 80/85/90/95	29138		

Alle Angaben ohne Gewähr
Stand: 03/18